

Canada Catalog Supplement Zoning Thermostat (T-54)

The wireless Zoning Thermostat (T-54) works with the Climate Cöontrol™ Zoning System. It features an optional slab sensor, and can function as an air sensor or a combination air and slab sensor for optimal room comfort control. Use the optional slab sensor to set minimum or maximum slab temperatures. The thermostat uses two standard AAA batteries. Air setpoint range is 43°F (6°C) to 86°F (30°C). Slab setpoint range is 68°F (20°C) to 113°F (45°C).

Part No.	Part Description	Each Qty.
A3600054	Zoning Thermostat (T-54), white	1

Zoning Thermostat (T-54)



Use the Zoning Thermostat Mounting Kit to properly mount the T-54 Thermostat to a wall or to cover up a wall area when replacing a larger, conventional thermostat.

Part No.	Part Description	Each Qty.
A3600154	Zoning Thermostat Mounting Kit, T-54	1

Zoning Thermostat Mounting Kit, T-54



Connecting the Outdoor Sensor (A3600254) displays the outdoor temperature on the user interface.

Connecting the Slab Sensor (A3600010) provides slab minimum or maximum temperatures and displays the slab setpoint and current reading on the user interface (if used).

Important: Using any other sensors with the T-54 Thermostat will give inaccurate temperature readings.

Part No.	Part Description	Each Qty.
A3600254	Outdoor Sensor for T-54 Thermostat, 15-ft. lead	1
A3600010	Slab Sensor for T-54 Thermostat, 12-ft. lead	1

T-54 Thermostat Sensors

